




 






 




 

 
 








 


 



 



 




 





 
 
 
 











 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 TV
 DVD	 DVD	 SAT	 SAT
 AUX	 AUX	 PLAY MODE	 REC MODE
 TV	 TV	 FF	 FF
 DVD	 DVD	 II	 II
 SAT	 SAT	 III	 III
 AUX	 AUX	 Play	 Play
 TV GUIDE	 TV GUIDE	 Left	 Left
 SUBTL	 SUBTL	 Right	 Right
 MENU	 MENU	 Up	 Up
 INTERACTIVE	 INTERACTIVE	 Down	 Down
 TV	 TV	 OK	 OK
 EPG	 EPG	 Left	 Left
 SKY	 SKY	 Right	 Right
 VOL +	 VOL +	 Up	 Up
 CH +	 CH +	 Down	 Down
 EXIT	 EXIT	 Left	 Left
 USB	 USB	 Right	 Right
 Red / USB Left	 Red	 Up	 Up
 Red / USB Left	 Red	 Down	 Down
 Green / USB	 Green	 Left	 Left
 Green / USB	 Green	 Right	 Right
 Yellow / USB Up	 Yellow	 Up	 Up
 Yellow / USB Up	 Yellow	 Down	 Down
 Blue / USB Right	 Blue	 Left	 Left
 Blue / USB Right	 Blue	 Right	 Right
 Up	 Up	 HOME	 HOME
 Left	 Left	 SMART	 SMART
 Enter	 Enter	 APP	 APP
 Right	 Right	 MEDIA	 MEDIA
 Down	 Down	 CH +	 CH +
 Up	 Up	 CH -	 CH -
 Left	 Left	 1	 1
 Enter	 Enter	 2	 2
 Right	 Right	 3	 3
 Down	 Down	 4	 4
 Up	 Up	 5	 5
 Left	 Left	 6	 6
 Enter	 Enter	 7	 7
 Right	 Right	 8	 8
 Down	 Down	 9	 9
 Up	 Up	 0	 0
 Left	 Left	 PRE-CH	 PRE-CH
 Enter	 Enter	 A	 A
 Right	 Right	 B	 B
 Down	 Down	 C	 C
 Up	 Up	 D	 D
 Left	 Left	 Mandis SHOP	 Mandis SHOP
 Enter	 Enter	 www.mandis.tv	 www.mandis.tv






 



 

 
 
 


 
 

 












	Original	Replacement		Original	Replacement
	QV	Options			Size
	FAV	Pre Ch			Prog / Mix
	Source	AV			Prog / Mix
	Sleep	Sleep			Return / SUBPG
	Picture	+  Shift + Format			Repeat / Reveal
	Sound	+  Shift + Dual			Search / Hold
	Display	Info			
	I/II / Top	Dual			
	FAV - / REV	<<			
	FAV + / FWD	>>			
	USR/CR / Text	Media			
	USR/CR / Text	Text			
	Play/Pause / Index	Play			
	Play/Pause / Index	+  Shift + Info			
	Play/Pause / Index	Pause			
	Stop / Cancel	Stop			
	Stop / Cancel	+  Shift + Exit			

	Original	Replacement
	Size	Format
	Prog / Mix	Smart
	Prog / Mix	+  Shift + Sleep
	Return / SUBPG	Back
	Repeat / Reveal	+  Shift + Back
	Search / Hold	TV/R





Original	Replacement	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Replacement	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

