 





 
 




Original	Replacement
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/-$	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back





Original	Replacement	Original	Replacement
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	C.S.M.		Options
	SFC		Subt
	Subwoofer		List
	S.SRND		Red
	Dolby PL		Green
	C.Focus		Yellow
	CH Select-Test		Smart
	F.M Mode Setup		Format
	Zoom		Eject
			Group
			Audio
			Blue
			Dual







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +
	Tv Vol-		Vol -





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>
	Pause		Pause

Original	Replacement	Original	Replacement
	Play		Play
	Stop		Stop

