



Original	Replacement
Power TV	Power
Power STB	+ Shift + Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Vol+	Vol +
Vol-	Vol -

Original	Replacement
Mute	Mute
CH.List	List
P+	Ch +
P-	Ch -
Menu	Menu
Smart Hub	Smart
Guide	Guide
Tools	Options
Info	Info
Back/Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red





Original	Replacement	Original	Replacement
	Green		Green
	Yellow		Yellow
	Blue		Blue
	D		Dual
	Status		TV/R
	More		3D
	E-Manual		D. Menu
	Recommend		Format
	AD/Subt		Subt
	<<		<<
	I<<		I<<
	Pause		Pause
	>>		>>
	>>I		>>I
	Rec		Rec
	Play		Play
	Stop		Stop

