








 






 



 
 


 
 


 



 



 
 


 
 

 



 


 
 


 


 

 
 

 

 







 




 


 
 

 

 



 





 

 








Original		Replacement		Original		Replacement	
	System Standby		Power		Music		Blue
	Muting		Mute		Master Vol +		Vol +
	Menu		Menu		Master Vol -		Vol -
	1		1		>>I / Preset +		>>I
	2		2		I<< / Preset -		I<<
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Sleep		Sleep
	9		9		FM Mode		Smart
	0 / 10		0		Enter / Memory		Media
	Display		Info		Auto Cal		Options
	2 CH		Red		<< / Tuning -		<<
	AFD		Green		>> / Tuning +		>>
	Movie		Yellow		D.Tuning		Text









 





 







 





 









Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/10	 0
 -/-->10	 Guide
 Enter/Memory	 Pre Ch
 Menu	 Menu
 DVD Menu	 D. Menu
 Return/Exit	 Exit
 Tools	 Options
 Display	 Info
 D.Tuning/D.Skip	 Dual
 FM Mode	 AV
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right









 


 


 

 

 
 




 
 
 

 

 

 
 




Original	Replacement
	 Left
	 Play
	 Pause
	 Stop
	 <</Tuning-
	 >>/Tuning+
	 >>I/Preset+
	 I<</Preset-
	 ←/Replay
	 →/Advance
	 DVD
	 Tuner
	 D.Tuning/D.Skip Tuner
	 Enter/Memory
	 1 Tuner
	 2 Tuner
	 3 Tuner

Original	Replacement
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0
	 Display Tuner
	 OK Tuner
	 Up Tuner
	 Down Tuner
	 Right Tuner
	 Left Tuner
	 <</Tuning- Tuner
	 >>/Tuning+
	 I<</Preset-/Tv CH- Tuner
	 >>I/Preset+/Tv CH+ Tuner





Original	Replacement
 Power	 Power
 Play	 Play
 Stop	 Stop
 Auto Cal	 Smart
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 >10* CLEAR	 Guide
 OK	 Ok

Original	Replacement
 Enter/Memory	 Pre Ch
 Menu	 Menu
 Display	 Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 FM Mode	 AV
 2CH	 Red
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 Pause	 Pause
 >>/Tuning+	 >>





Original	Replacement
 Power	 Power
 Power AV	 +  Shift + Power
 Auto Cal	 Smart
 Sleep	 Sleep
 A.F.D.	 Green
 Movie	 Yellow
 Music	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0

Original	Replacement
 -/-->10	 +  Shift + Guide
 Enter/Memory	 Pre Ch
 FM Mode	 AV
 Display	 +  Shift + Info
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Tuning-	 <<



