

 



























































 











Original	Replacement	Original	Replacement
	Power		Power
	i+		Info / Angle
	Sleep		Sleep / Timer
	Rec List		Smart / List
	Media Player		Display / Media
	Audio I/II/I+II		Audio / Lang I/II
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Vol +		Vol+
	4		4
	5		5
	6		6
	Vol -		Vol-
	7		7
	8		8
	9		9
	P +		CH+ / Page+
	Recall		Back / Return
	0		0
	Input		AV / Input / RDS
	P -		CH- / Page-
	DTV		D.Menu / Top
	Aspect		Picture / Format
	PC		Shift + Fav / Marker / PC
	Radio		TV/Radio /
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Up / >>I		Up
	Up / >>I		>>I / Preset+
	Menu		Menu / Home
	Left / <<		<< / Tune-
	Left / <<		Left





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement
