

 


 


 
 



 

 


 
 


 

 

 

 









Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 Sleep	 Sleep
 TV/AV	 AV
 Band/Tuner	 TV/R
 Double Re-Master	 Smart
 Group	 3D
 Repeat/MIX 2CH	 Text
 Play Mode / P.Memory	 Shift + Play
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 $\geq 10 / - / -$	 Guide
 CANCEL	 Exit
 \ll Skip	 \ll
 Skip \gg \ll	 \gg
 SLOW/S \ll	 \ll
 \blacksquare	 Stop
 \parallel	 Pause
 \blacktriangleright	 Play
 TOP MENU DIRECT NAVIGATOR	 Shift + Menu
 TOP MENU DIRECT NAVIGATOR	 D. Menu
 MENU PLAY LIST	 Menu
 MENU PLAY LIST	 List
 \blacktriangle	 Up
 \blacktriangleleft	 Left








 
 
 
 
 














 


 
 
 
 
 

 










Original	Replacement
	Ok
	Right
	Down
	Info
	Back
	Vol -
	Vol +
	Mute
	Red
	Subt
	Format
	Blue
	Dual
	Rec
	Green
	Options
	Ch +

Original	Replacement
	Yellow
	Ch -





Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / - / +10	 GUIDE Guide
 I<</CH-	 I<<
 >>I/CH+	 >>I
 << Slow/Search	 <<
 Slow/Saerch >>	 >>

Original	Replacement
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Display	 Info

