 




 
 
 
 

 

 
 

 


 
 
 

 
 
 
 
 





 
 



 
 
 

 




 







 



 
 
 
 
 

 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	>>		>>
	<<		<<
	>>		>>





Original	Replacement	Original	Replacement
 I<<	 I<<		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Audio	 Dual		
 Repeat	 +  Shift + Text		
 EPG	 Guide		
 TV / Radio	 TV/R		
 Sleep	 Sleep		
 Red / Zoom	 Red		
 Red / Zoom	 Eject		
 Green / Aspect	 Green		
 Green / Aspect	 +  Shift + Format		
 Yellow / V-Format	 Yellow		
 Yellow / V-Format	 Format		
 Blue / Timer	 Blue		
 Blue / Timer	 Options		

