



Original		Replacement		Original		Replacement	
	VHS Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		CH + / Tracking/V-Lock +		Ch +
	TV CH -		Shift + Ch -		CH - / Tracking/V-Lock -		Ch -
	TV Volume +		Vol +		Input		Media
	TV Volume -		Vol -		Repeat		Text
	Operation Select VHS		Smart		I<< Index/Skip		I<<
	1		1		>>I Index/Skip		>>I
	2		2		<< REW		<<
	3		3		>> FF		>>
	4		4		Stop		Stop
	5		5		Pause / Slow		Pause
	6		6		Play		Play
	7		7		Menu / Play List		Menu
	8		8		Menu / Play List		List





Original	Replacement
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Return / Exit	Back
Prog / Check	Shift + Sleep
i-Timer	Sleep
Prog Play / Play Mode	Shift + Right
<< JET REW /	Options
Timer	AV
DVD-RAM	Format
Rec Mode	Shift + Rec
Rec	Rec
VHS Status	Info
A / Cinema	Red
B / Off Timer	Green

Original	Replacement
Ext Link	3D





Original		Replacement		Original		Replacement	
	DVD Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		Repeat		Text
	TV CH -		Shift + Ch -		I<< Index/Skip		I<<
	TV Volume +		Vol +		>>I Index/Skip		>>I
	TV Volume -		Vol -		<< REW		<<
	Operation Select DVD		Smart		>> FF		>>
	1		1		Stop		Stop
	2		2		Pause / Slow		Pause
	3		3		Play		Play
	4		4		Direct Navigator / Top Menu		Shift + Menu
	5		5		Direct Navigator / Top Menu		D. Menu
	6		6		Menu / Play List		Menu
	7		7		Up		Up
	8		8		Left		Left





Original	Replacement	Original	Replacement
 Enter	 Ok		
 Right	 Right		
 Down	 Down		
 Functions	 Options		
 Return / Exit	 Back		
 Setup	 Shift + Options		
 DVD-RAM	 Format		
 DVD Status	 Info		
 A / Quick OSD	 Red		
 B / Quick Replay	 Green		
 Manual Skip	 3D		

Original	Replacement

