



Original	Replacement	Original	Replacement
Power DVD	Power	CH-	Ch -
Direct Tv Rec	TV/R	ShowView	Blue
DVD	Smart	Manual Skip	Subt
SD/PC	Media	I<< Skip	I<<
1	1	>>I Skip	>>I
2	2	<< Slow/Search	<<
3	3	Slow/Search >>	>>
4	4	Stop	Stop
5	5	Pause	Pause
6	6	Play	Play
7	7	Direct Navigator/Top	Menu
8	8	Function	Options
9	9	Sub Menu	D. Menu
0	0	Return	Back
*/Cancel	Guide	Up	Up
Input Select	AV	Down	Down
CH+	Ch +	Right/II>	Right

Original	Replacement	Original	Replacement
Power DVD	Power	CH-	Ch -
Direct Tv Rec	TV/R	ShowView	Blue
DVD	Smart	Manual Skip	Subt
SD/PC	Media	I<< Skip	I<<
1	1	>>I Skip	>>I
2	2	<< Slow/Search	<<
3	3	Slow/Search >>	>>
4	4	Stop	Stop
5	5	Pause	Pause
6	6	Play	Play
7	7	Direct Navigator/Top	Menu
8	8	Function	Options
9	9	Sub Menu	D. Menu
0	0	Return	Back
*/Cancel	Guide	Up	Up
Input Select	AV	Down	Down
CH+	Ch +	Right/II>	Right





Original	Replacement
<II/Left	Left
Enter	Ok
Prog/Check	Sleep
Display	Info
Status	3D
Time Slip	Format
Timer	Shift + AV
Erase	Exit
Rec Mode	Shift + Rec
Rec	Rec
A/Ext Link	Red
B	Green
C/Create Chapter	Yellow
Audio	Dual
Power Tv	Shift + Power
AV Tv	Eject
CH+ Tv	Shift + Ch +

Original	Replacement
CH- Tv	Shift + Ch -
Volume+ Tv	Vol +
Volume- Tv	Vol -

