 

 








 



 








 

 


 











 





 



 

 






Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 S.Mode /	 D.Menu / Top
 S.Mode /	 Shift + D.Menu / Top Menu
 P.Mode / Title	 Sound / Title
 FAV + / Go To	 Shift + CH+ /
 FAV - / Angle	 Shift + CH- /
 <<<	 <<< / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 >>>	 >>> / Tune+
 Reveal	 Smart / List
 I<<<	 I<<< / Preset-
 Stop	 Stop / Hold
 >>>I	 >>>I / Preset+
 Rec	 Rec / Rec Mode
 Red / Program	 Shift + Red / Netflix / Search

Original	Replacement
 Red / Program	 Red / Netflix / Search
 Green / Intro	 Green / APP / Repeat
 Yellow / Repeat	 Shift + Yellow / YouTube / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Blue / A-B	 Blue / Prime Video / Random
 Index / D.Disp.	 Display / Media
 Sub-T	 Subtitle / EQ
 Audio / Lang	 Audio / Lang I/II
 Size / Zoom	 Zoom / Size
 Info	 Info / Angle
 TV / Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 EPG	 Guide / EPG / -/-





Original	Replacement
P +	CH+ / Page+
Up	Up
Vol +	Vol+
Left	Left
OK	OK
Right	Right
P -	CH- / Page-
Down	Down
Vol -	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
Text / Setup	Text / Goto
Text / Setup	Shift + Text /
0	0
Recall / Eject	Shift + Back / Return
Recall / Eject	Back / Return

