


 

 

 









 









 















 









 





 












Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide
	3D		3D		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol +		Vol +
	6		6		Vol -		Vol -
	7		7		Prog -		Ch -
	8		8		Prog +		Ch +
	9		9		Liste		List
	0		0		TXT		Text
	Timer		AV		S-T		Subt
	Audio		Dual		TV / R		TV/R
	Menu		Menu		Play / Pause		Play
	Info		Info		Play / Pause		Pause





Original	Replacement	Original	Replacement
	Stop		Stop
	Rec		Rec
	←		Back
	Red / <<		Red
	Red / <<		<<
	Green / >>		Green
	Green / >>		>>
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		Blue
	Blue / >>I		>>I

