

 

 






 

 

 

 

 





 















Original	Replacement
System Power	Power
Standby	Shift + Power
CD	Shift + 3
MD/CD-R	Shift + 5
Tuner	Shift + 6
DVD	Shift + 2
DTV/CBL	Shift + 1
VCR	Shift + 4
V-AUX	Shift + 7
Multi CH In	Shift + 8
Volume +	Vol+
Sleep	Sleep / Timer
Volume -	Vol-
Mute	Mute / Dimmer
Stereo	1
Music	2
Entertain	3

Original	Replacement
Movie	4
Standard	5
Select	6
Extd Sur.	7
Direct ST	8
Speakers A	9
Speakers B	0
Night	Guide / EPG / -/-
Straight	Fav / Marker / PC
Title/Level	Sound / Title
Up	Up
Set Menu	Menu / Home
Left/-	Left
Enter	OK
Right/+	Right
Return	Back / Return
Down	Down






Original	Replacement
 System Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Freq/Text	 Red / Netflix / Search
 Sleep	 Sleep / Timer
 EON	 Green / APP / Repeat
 PTY Seek Mode	 Yellow / YouTube / Repeat
 PTY Seek Start	 Blue / Prime Video / Random
 Volume +	 Vol+
 Volume -	 Vol-

Original	Replacement
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Fav / Marker / PC
 Title/Level	 Sound / Title
 Up / Preset+	 Up
 Up / Preset+	 >> / Preset+
 Menu/Set Menu	 Menu / Home
 Left / A/B/C/D/E-	 Left



 







Original		Replacement		Original		Replacement	
	Enter		OK				
	Right /		Right				
	Return		Back / Return				
	Down / Preset-		Down				
	Down / Preset-		Left / Preset-				
	Display		Display / Media				











 

 

 

 

 



 



Original	Replacement
 Power AV	 AV / Input / RDS
 Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Disc Skip	 Eject / Surround
 Sleep	 Sleep / Timer
 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 Play	 Play / Slow

Original	Replacement
 >>I	 >>I / Preset+
 >>	 >> / Tune+
 Stop	 Stop / Hold
 <<	 << / Tune-
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0













 

 

 



 

 



 

 







	Original	Replacement	Original	Replacement
	+10	 Guide / EPG / -/--		
	ENT	 Fav / Marker / PC		
	Title	 Sound / Title		
	Up	 Up		
	Menu	 Menu / Home		
	Left/-	 Left		
	Enter	 OK		
	Right/+	 Right		
	Return	 Back / Return		
	Down	 Down		
	Display	 Display / Media		





Original	Replacement
 System Power	 Power
 Standby	 Shift + Power
 CD	 Shift + 3
 MD/CD-R	 Shift + 5
 Tuner	 Shift + 6
 DVD	 Shift + 2
 DTV/CBL	 Shift + 1
 VCR	 Shift + 4
 V-AUX	 Shift + 7
 Multi CH In	 Shift + 8
 Disc Skip	 Eject / Surround
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold

Original	Replacement
 >>	 >> / Tune+
 Volume +	 Vol+
 Volume -	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 ENT	 Fav / Marker / PC
 Display	 Display / Media

