



Original	Replacement
Power	Power
Shift + Guide / EPG / -/-	Shift + Guide / EPG / -/-
TV / VCR	AV / Input / RDS
1	1
2	2
3	3
Re-View	Back / Return
4	4
5	5
6	6
7	7
8	8
9	9
Timer	Sleep / Timer
X / 0000	Exit / Cancel / Clear
0	0
-/-	Guide / EPG / -/-

Original	Replacement
Menu	Menu / Home
Prog.	TV/Radio /
Timer ?	Shift + Sleep / Timer
30 Sec >>	Shift + >> /
OK / Enter /	OK
Start Debut +	Shift + Up
Stop Fin +	Shift + Right
Date +	Shift + CH+ /
Start Debut -	Shift + Down
Stop Fin -	Shift + Left
Date -	Shift + CH- /
<< / Tune-	<< / Tune-
Play	Play / Slow
>> / Tune+	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze





Original	Replacement	Original	Replacement
Up / TV PR +	CH+ / Page+		
Up / TV PR +	Up		
Left / TV Vol - / I<<	Left		
Left / TV Vol - / I<<	I<< / Preset-		
Left / TV Vol - / I<<	Vol-		
Right / TV Vol + / >>I	Right		
Right / TV Vol + / >>I	>>I / Preset+		
Right / TV Vol + / >>I	Vol+		
Down / TV PR -	Down		
Down / TV PR -	CH- / Page-		

Original	Replacement





Original	Replacement
Power	Power
Audio Mute	Mute / Dimmer
TV / VCR	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Timer	Sleep / Timer
X / 0000	Exit / Cancel / Clear
0	0
-/--	Guide / EPG / -/--
Prog -	CH- / Page-

Original	Replacement
Prog -	Down
Prog +	CH+ / Page+
Prog +	Up
Vol -	Vol-
Vol -	Left
Vol +	Vol+
Vol +	Right

