


Original	Replacement	Original	Replacement
	Recall		Pre Ch
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Menu		Menu
	P.Mode		Format
	Zoom		Eject
	Exit		Exit

Original	Replacement	Original	Replacement
	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down
	Down / P -		Ch -
	Right / V +		Right
	Right / V +		Vol +
	Left / V -		Left
	Left / V -		Vol -
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Still		Pause
	Display		Info
	Sleep		Sleep
	Mute		Mute

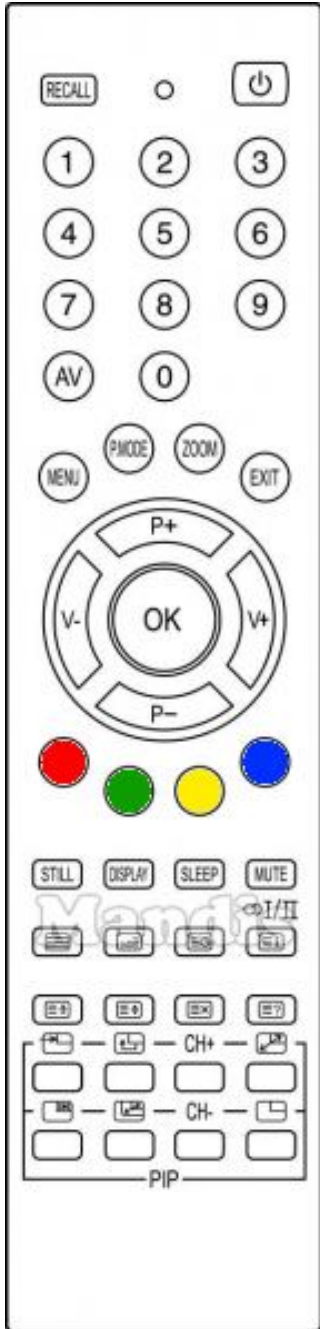



Original	Replacement	Original	Replacement
[=]	REPEAT TEXT Text		
[/=]	SHIFT + REPEAT TEXT Shift + Text		
[=i] / I/II	SOUND DUAL Dual		
[=□]	Stop		
[=◆]	SHIFT + ZOOM Shift + Eject		
[=X]	SHIFT + CLEAR EXIT Shift + Exit		
[=?]	E-MANUAL D.MENU D. Menu		
	HOME SMART Smart		
	APP MEDIA Media		
	SHIFT + OK Shift + Ok		
	SHIFT + + CH Shift + Ch +		
	SHIFT + - CH Shift + Ch -		
	RETURN BACK Back		
	SHIFT + Stop		
	SHIFT + HOME SMART Shift + Smart		

Original	Replacement	Original	Replacement

