


 
 
 

 
 

 
 



 

 

 

 

 
 


 


 
 




 

 




 




 

 
 
 

 
 
 
 




 





 





Original	Replacement
 Power	 Power
 i	 DISPLAY INFO
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Favorite	 SHIFT +  FAV PRE-CH
 Last View	 FAV PRE-CH
 Audio	 SOUND DUAL
 Off Timer	 SHIFT +  Power
 Aspect	 PICTURE FORMAT

Original	Replacement
 GUIDE	 GUIDE
 Vol +	 Vol +
 Vol -	 Vol -
 Input TV	 TV/R
 Input AV	 AV
 CH +	 Ch +
 CH -	 Ch -
 Mute	 Mute
 Text	 REPEAT TEXT
 STTL	 AD SUBT
 Exit	 CLEAR EXIT
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 TOP MENU MENU



