



Original	Replacement
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
AV/Input Tv	AV / Input / RDS
Vol- Tv	Vol-
1	1
2	2
3	3
Open/Close	Eject / Surround
4	4
5	5
6	6
PIP	Picture / Format
7	7
8	8
9	9
Audio/Secondary	Sound / Title

Original	Replacement
Cancel	Shift + Exit / Cancel / Clear
0	0
Audio	Audio / Lang I/II
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
>> Search	>> / Tune+
I<</Skip	I<< / Preset-
Pause	Pause / Step / Freeze
>>/Skip	>>/ Preset+
Status	Info / Angle
Stop	Stop / Hold
Exit	Exit / Cancel / Clear
Pop-Up Menu	Display / Media
Top Menu	D.Menu / Top
Up	Up
Home	Menu / Home





Original	Replacement	Original	Replacement
Left	Left		
OK	OK		
Right/II>	Right		
Option	Setup / OPT /		
Down	Down		
Return	Back / Return		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

