



| Original | Replacement   | Original | Replacement       |
|----------|---------------|----------|-------------------|
|          | Vol +         |          | Vol+              |
|          | P+            |          | CH+ / Page+       |
|          | Vol -         |          | Vol-              |
|          | Power         |          | Power             |
|          | P-            |          | CH- / Page-       |
|          | Mute          |          | Mute / Dimmer     |
|          | 1             |          | 1                 |
|          | 2             |          | 2                 |
|          | 3             |          | 3                 |
|          | 4             |          | 4                 |
|          | 5             |          | 5                 |
|          | 6             |          | 6                 |
|          | 7             |          | 7                 |
|          | 8             |          | 8                 |
|          | 9             |          | 9                 |
|          | PP            |          | Back / Return     |
|          | PP            |          | Fav / Marker / PC |
|          | 0             |          | 0                 |
|          | Display [ + ] |          | Display / Media   |
|          | [≡]           |          | Text / Goto       |
|          | □             |          | Stop / Hold       |
|          | ?             |          | Smart / List      |
|          | ↕             |          | Zoom / Size       |
|          | - / ψ         |          | I<< / Preset-     |
|          | - / ψ         |          | Left              |
|          | Menu          |          | Menu / Home       |
|          | Menu          |          | OK                |
|          | + / >>I       |          | >>I / Preset+     |
|          | + / >>I       |          | Right             |
|          | ◇◇ / I-II     |          | Audio / Lang I/II |
|          | ◇◇ / I-II     |          | Setup / OPT /     |

