



Original		Replacement		Original		Replacement	
	Standby/ On		Power		0		0
	Input Select		AV / Input / RDS		Clear		Exit / Cancel / Clear
	HDMI		Shift + 0		[i +]		Info / Angle
	Open/Close/Eject		Eject / Surround		Text		Text / Goto
	1		1		Variable Replay/		Shift + I<< / Preset-
	2		2		Variable Skip/		Shift + I>> / Preset+
	3		3		Guide		Guide / EPG / - / -
	Prog+		CH+ / Page+		Top Menu		D.Menu / Top
	4		4		Menu/ List		Menu / Home
	5		5		Up		Up
	6		6		Left		Left
	Prog-		CH- / Page-		Enter / OK		OK
	7		7		Right		Right
	8		8		Display		Display / Media
	9		9		Down		Down
	Timer / Prog		TV/ Radio /		Return / Back		Back / Return
	Set up		Set up / OPT /		Red		Red / Netflix / Search





Original	Replacement
Green	Green / APP / Repeat
Yellow System	Yellow / YouTube / Repeat
Blue / Search	Blue / Prime Video / Random
Blue / Search	Shift + Red / Netflix /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
<<	<< / Preset-
Stop	Stop / Hold
>>	>> / Preset+
Pause	Pause / Step / Freeze
VCR	Shift + 4
HDD	Shift + 7
DVD	Shift + 2
Time Shift	Sleep / Timer
Dubbing	Vol +
Rec Speed	Vol -

Original	Replacement
Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ
1.3x/0.8xPlay	Smart / List
Audio	Audio / Lang I/II
Sat. Link	Fav / Marker / PC
A1	Shift + Blue / Prime

