



 






 











 





















 
 


 














 




 





Original	Replacement	Original	Replacement
 Power	 Power	 Rec/OTR	 Rec
 Eject	 Eject	 Pause/Still	 Pause
 Timer Rec	 AV	 Play	 Play
 1	 1	 Stop	 Stop
 2	 2	 >>	 >>
 3	 3	 <<	 <<
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Program	 Sleep
 0/AV	 0	 Menu	 Menu
 Tv/VCR	 TV/R	 Index	 Info
 CH/Tracking+	 Ch +	 Cancel	 Exit
 CH/Tracking-	 Ch -	 ATR	 Guide
 Call	 Pre Ch	 Clock/Counter	 Smart





	Original	Replacement		Original	Replacement
	Zero/Return		Back		
	Counter Reset		Media		

