







 




 


 

















 
 





 
 





Original	Replacement
 Power	 Power
 O/D/N	 D.Menu / Top
 Sound / Title	 Sound / Title
 Shift + Back / Return	 Shift + Back / Return
 Source	 Source
 Info / Angle	 Info / Angle
 Audio / Lang I/II	 Audio / Lang I/II
 Shift + Text / Goto	 Shift + Text / Goto
 Red / Netflix / Search	 Red / Netflix / Search
 Text / Goto	 Text / Goto
 Green / APP / Repeat	 Green / APP / Repeat
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Menu / Home	 Menu / Home
 Back / Return	 Back / Return
 CH+ / Page+	 CH+ / Page+
 Up	 Up

Original	Replacement
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 CH- / Page-	 CH- / Page-
 Down	 Down
 Shift + Power	 Shift + Power
 Play / Slow	 Play / Slow
 Mute / Dimmer	 Mute / Dimmer
 TUNE-	 TUNE-
 Pause / Step / Freeze	 Pause / Step / Freeze
 TUNE+	 TUNE+
 Shift + Pause / Step / Freeze	 Shift + Pause / Step / Freeze
 I<< / Preset-	 I<< / Preset-
 Stop / Hold	 Stop / Hold
 I>> / Preset+	 I>> / Preset+





Original	Replacement
[ <> ]/Zoom	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
	+  Shift + Up
0	0
	+  Shift + Down
AV1	+  Shift + 1
AV2	+  Shift + 2
AV3	+  Shift + 3
AV4	+  Shift + 4

Original	Replacement
Timer	Sleep / Timer
RGB1	Smart / List
RGB2	Display / Media

