



 

 

 



 












 






 






Original	Replacement	Original	Replacement
 Standby	 Power	 7	 7
 Open / Close	 Eject	 8	 8
 Angle	 Format	 9	 9
 Display / Info	 Info	 0	 0
 Q-Play / TV/Radio	 TV/R	 Random	 Smart
 Q-Play / TV/Radio	 Shift + Play	 Audio	 Dual
 P/N / EPG	 Guide	 Vol+	 Vol +
 Search / TTX	 Text	 Vol-	 Vol -
 Search / TTX	 Shift + TV/R	 Stop	 Stop
 PBC / List	 List	 Play	 Play
 Subtitle	 Subt	 Pause	 Pause
 1	 1	 Red / Prev	 Red
 2	 2	 Red / Prev	 I<<
 3	 3	 Green / Next	 Green
 4	 4	 Green / Next	 >>I
 5	 5	 Yellow / REW	 Yellow
 6	 6	 Yellow / REW	 <<





Original	Replacement	Original	Replacement
 Blue / FF	 Blue	 Rec / Repeat	 Shift + Text
 Blue / FF	 >>	 A-B / FAV	 Pre Ch
 Setup	 Options	 Exit / Slow	 Exit
 Return	 Back	 Video	 Shift + AV
 Up / CH+	 Up	 Exit / Slow	 Shift + >>
 Up / CH+	 Ch +	 Step	 Shift + Pause
 Down / CH-	 Down	 DVD / DVB	 AV
 Down / CH-	 Ch -	 Mute	 Mute
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Title / Pg Up	 Shift + Ch +		
 Title / Pg Up	 Media		
 Menu / Pg Dn	 Menu		
 Menu / Pg Dn	 Shift + Ch -		
 Zoom / PVR	 Shift + Eject		
 Rec / Repeat	 Rec		

