













 


 


 
 







 



 




 
 
 

 
 



 


 
 

 





 



 








Original	Replacement	Original	Replacement
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [<<>>]	 Format
 0	 0	 TV/R	 TV/R
 Recall	 Pre Ch	 [i+] / [≡i]	 Info
 Source	 AV	 Text / [≡] / [≡] []	 Text
 Menu/DVD	 Menu	 Pause	 Pause
 Guide	 Guide	 Play / I/II	 Play
 [] [] [] []	 3D	 Play / I/II	 Dual











 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 



























 


Original	Replacement	Original	Replacement
 ◀◀ / [≡□]	 <<		
 ◀◀ / [≡□]	SETTINGS OPT Options		
SUBTITLE  ▶▶ / Subtitle	AD SUBT Subt		
SUBTITLE  ▶▶ / Subtitle	 >>		
 ▲	HOME SMART Smart		
 ■ / [≡□]	 ■ Stop		
 ◀◀◀ / [≡↕]	ZOOM ▲ Eject		
 ◀◀◀ / [≡↕]	 ◀◀ I<<		
 ▶▶◀ / [⊖][≡X]	 >>▶ >>I		
 ▶▶◀ / [⊖][≡X]	RETURN BACK Back		
	 A Red		
	 B Green		
	 C Yellow		
	 D Blue		

Original	Replacement	Original	Replacement






 

 

 


 

 



 



 

















Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
 _ Menu/DVD	 Menu	  / [≡□]	 Stop
 - Exit/Back	 Exit	  / [≡⇅]	 Eject
 - Up	 Up	  / [≡⇅]	 I<<<
 Left	 Left	  / [⊙][≡X]	 >>>I
 OK	 Ok	  / [⊙][≡X]	 Back





Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 P+	 Ch +
 P-	 Ch -
 Vol-	 Vol -
 Vol+	 Vol +

Original	Replacement
  / [v]	 Pause
 ▶ / I/II	 Play
 ▶ / I/II	 Dual
 ⏩ / [≡▶]	 <<<
 ⏩ / [≡▶]	 TV/R
 SUBTITLE ▶▶ / Subtitle	 >>>
 SUBTITLE ▶▶ / Subtitle	 Subt
 ▲	 Smart
 ■ / [≡□]	 Stop
 ⏪ / [≡⇅]	 Eject
 ⏪ / [≡⇅]	 I<<<
 ▶▶ / [⊙][≡X]	 Back
 ▶▶ / [⊙][≡X]	 >>>I

