

 

 

 
 
 

 







 

 





Original	Replacement	Original	Replacement
 Keystone+	 Up	 8	 Shift + Invert 3D /
 Left	 Left	 Aspect Ratio	 Eco / Aspect
 Menu	 Menu	 9	 Shift + Mute Blank / Mute
 Menu	 Enter	 Hide	 Comp / Video
 Right	 Right	 0 / e	 Shift + Video Comp / Video
 Keystone-	 Down	 Power	 Power
 1	 Shift + Page▲ Vol + / Page +		
 2	 Shift + Play + / Play		
 3	 Shift + Focus Volt / Focus		
 4	 Shift + Page▼ Vol - / Page -		
 Resync	 Mode		
 5	 Shift + - / Stop		
 Zoom	 Auto		
 6	 Shift + Info Help /		
 Source	 Source		
 Freeze	 Freeze / Timer		
 7	 Shift + Aspect Eco / Aspect		

