 



 
 


 


 
 


 
 
 

 
 
 


 


 
 

 


 
 


 




 
 


 
 
 
 

 
 
 

 
 
 
 



 









Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 Sleep	 Sleep	 +10	 Guide
 Timer	 Shift + AV	 Clear	 Exit
 Room EQ	 Ch +	 PTY	 Options
 Random	 Green	 Time Display	 List
 Repeat	 Text	 Display	 Info
 P.Mode	 Format	 Mute	 Mute
 Dimmer	 Media	 Flat	 TV/R
 1	 1	 D-Bass	 Smart
 2	 2	 Room EQ Mode	 Ch -
 3	 3	 Tone Turn Over	 Dual
 4	 4	 Mode	 Menu
 5	 5	 Enter	 Ok
 6	 6	 Phono	 Back
 7	 7	 AUX	 Red
 8	 8	 Sound Control UP	 Up
 9	 9	 Sound Control	 Down



Down



Original	Replacement	Original	Replacement
 Sound Preset	 Right		
 Sound Preset Left	 Left		
 Manual EQ	 3D		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Play/Pause CD	 Play		
 Tuner/Band	 Subt		
 Stop/Auto/Mono	 Stop		
 Input Select	 AV		
 I<< P.Call	 I<<		
 P.Call >>I	 >>I		
 << Tuning	 <<		
 Tuning >>	 >>		

