

 


 
 
 

 

 

 

 
 


 

 

 
 

 

 

 
 



 

 

 


 
 


 
 


 

 
 
 
 

 
 
 

 

 

 





Original	Replacement	Original	Replacement
	Power		Power
	TV / Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV / Input Select		AV
	Tracking/V-Lock +		Ch +
	Tracking/V-Lock -		Ch -
	Volume+		Vol +
	Volume-		Vol -
	Replay		Smart
	OSD / Display		Info
	Search		TV/R
	Video Plus +		Media
	--		Shift + Guide
	I<< Index-		I<<
	>>I Index+		>>I
	Rec		Rec
	Pause / Step		Pause
	Menu		Menu
	OK		Ok
	Exit		Exit
	Play / Up		Up
	Play / Up		Play
	<< / Left		Left
	<< / Left		<<



