



 

 
 
 














 

 
 
 



 






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 P<P	 Pre Ch
 Menu	 Menu
 [ i ]	 Info
 Up / P+	 Up
 Up / P+	 Ch +

Original	Replacement
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 I/II	 Dual
 PP	 Back
 TV	 TV/R
 AV	 AV
 Mute	 Mute
 Red / Sound	 Red
 Red / Sound	 Shift + Dual
 Green / Picture	 Format
 Green / Picture	 Green
 Yellow / Feature	 Yellow





Original		Replacement		Original		Replacement	
	Blue / Install		Blue				
	[≡]		Text				
	[≡⊕]		Sleep				
	[≡□]		Stop				
	[≡X] / [■]		Exit				
	[ /≡] [ ■ ]		Shift + Text				
	[≡↕] / [□]		Eject				
	[≡?] / PC		Smart				
	[≡i]		Options				

