



Original	Replacement
	Source / AV / Input / RDS
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Back / Return
	Setup / OPT /
	Smart / List
	Fav / Marker / PC

Original	Replacement
	Info / Angle
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Picture / Format
	CH- / Page-
	Audio / Lang I/II
	Sound / Title
	D.Menu / Top
	Sleep / Timer
	Up
	Left
	OK
	Right
	Menu / Home
	Down



