









 

 


 


 






 




 



 

 








 
 

 
 


 
 


 









 




	Original	Replacement		Original	Replacement
	Power		Power		Rec
	Home		Smart		Stop
	1		1		Pause
	2		2		Play
	3		3		Vol+
	4		4		Vol-
	5		5		Setup
	6		6		I<< Prev
	7		7		>>I Next
	8		8		<< FR
	9		9		>> FF
	0		0		Up
	Goto		List		Left
	Mute		Mute		Enter
	Display		Info		Right
	Audio		Dual		Down
	Subtitle		Subt		Browser
					Rec
					Stop
					Pause
					Play
					Vol +
					Vol -
					Options
					I<<
					>>I
					<<
					>>
					Up
					Left
					Ok
					Right
					Down
					Media





Original		Replacement		Original		Replacement	
	Return		Back				
	Red / Slow		Red				
	Green / TimeShift		Green				
	Yellow / CM Skip		Yellow				
	Blue / Replay		Blue				
	Repeat		Text				
	Zoom		Eject				
	Copy		3D				
	TV System		TV/R				
	Source		AV				
	EPG		Guide				
	Edit		Format				
	Timer		Shift + AV				

