




 





 





 
 


 

 

 
 
 

 



 



 

 




 















 




 



 









 

 

 



 










Original	Replacement	Original	Replacement
 Power	 Power	 +10	 Guide
 Quick OSD	 Media	 Cancel	 Exit
 FL Select	 Smart	 Play Speed	 Red
 Open/Close	 Eject	 Dialogue	 Green
 Advanced	 TV/R	 Manual Skip	 Yellow
 Picture Mode	 Format	 Quick Replay	 List
 Repeat	 Text	 I<< Skip	 I<<
 1	 1	 Skip >>I	 >>I
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Top Menu	 Shift + Menu
 8	 8	 Menu	 Menu
 9	 9	 Functions	 D. Menu
 0	 0	 Return	 Back





Original	Replacement	Original	Replacement
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Subtitle	 Subt		
 Audio	 Dual		
 Angle/Page	 Blue		
 Play Mode	 Shift + Play		
 Setup	 Options		
 Transfer Mode	 AV		
 Zoom	 Shift + Eject		
 DNR	 3D		

