 



 



 











 



 
 





 


 
 
 

 
 
 

 
 
 



 







 
 



 



 


 



 

 





 













Original		Replacement		Original		Replacement	
	Power		Power		Green		Green
	Input TV		TV/R		Yellow		Yellow
	Input Av		AV		Blue		Blue
	Aspect		Format		Text		Text
	Viera Link		Smart		STTL		Subt
	Option		Options		Index		Media
	Direct TV Rec		Rec		Hold		Shift + Stop
	Guide		Guide		1		1
	Exit		Exit		2		2
	Up		Up		3		3
	Left		Left		4		4
	OK		Ok		5		5
	Right		Right		6		6
	Down		Down		7		7
	Menu		Menu		8		8
	Return		Back		9		9
	Red		Red		0 / VCR		0





Original		Replacement		Original		Replacement	
	Power DVD		Power				
	Rec DVD		Rec				
	Programme Down		Ch -				
	Programme Up		Ch +				
	I<< DVD		I<<				
	<< DVD		<<				
	>>I DVD		>>I				
	>> DVD		>>				
	Stop DVD		Stop				
	Pause/Step DVD		Pause				
	Play DVD		Play				



