




 


 
 
 


 



 

 


 
 


 
 

 
 







Original	Replacement
 Power	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Set	 Smart
 Subtitle	 Subt
 Angle	 Media
 Prog+	 Ch +

Original	Replacement
 Prog-	 Ch -
 Input Select	 AV
 TV / DVD	 TV/R
 Top Menu	 Shift + Menu
 Menu	 Menu
 System Menu	 D. Menu
 Title List	 List
 Timer	 Sleep
 Display	 Info
 Timer List	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Options	 Options





Original	Replacement
I<<	I<<
>>I	>>I
←	Vol -
→	Vol +
<< / <II / <I	<<
Play	Play
>> / I> / II>	>>
Time / Text	Text
Pause	Pause
Stop	Stop
Rec	Rec
Rec Stop	Shift + Stop
Rec Mode	Shift + Rec
Synchro Rec	Red
TV Power	Shift + Power
TV Input	Shift + AV
TV Prog+	Shift + Ch +

Original	Replacement
TV Vol+	Shift + Vol +
TV Vol-	Shift + Vol -
TV Prog-	Shift + Ch -

