







 






Original	Replacement	Original	Replacement
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto





Original	Replacement
 [≡⊕]	 Subtitle / EQ
 [/ ≡]	 Picture / Format
 [≡X]	 Exit / Cancel / Clear
 [≡↓]	 Zoom / Size
 [≡?]	 Display / Media
 [≡i]	 Smart / List

Original	Replacement













Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Up / P+	 Up	 +10	 Guide / EPG / -/-
 Up / P+	 CH+ / Page+	 0	 0
 Menu	 Menu / Home	 Repeat	 Green / APP / Repeat
 Left	 Left	 Search	 Red / Netflix / Search
 Select	 OK	 A→B	 Yellow / YouTube / Repeat
 Right	 Right	 Display	 Display / Media
 Down / P-	 CH- / Page-	 Audio	 Audio / Lang I/II
 Down / P-	 Down	 Subtitle	 Subtitle / EQ
 1	 1	 Zoom	 Zoom / Size
 2	 2	 Prog	 TV/Radio /
 3	 3	 C	 Blue / Prime Video / Random
 4	 4	 Angle	 Info / Angle
 5	 5	 Return	 Back / Return
 6	 6	 Time	 Sleep / Timer
 7	 7	 <<	 << / Tune-
 8	 8	 >>	 >> / Tune+





































































	Original	Replacement	Original	Replacement
	⏮	 PRESET- ⏮		<< / Preset-
	⏭	 PRESET+ ⏭		>> / Preset+
	▶/⏸	 SLOW ▶		Play / Slow
	⏸/⏸	 STEP-FREEZE ⏸		Pause / Step / Freeze
	■	 HOLD ■		Stop / Hold
	Title	 TITLE SOUND		Sound / Title
	Open / Close	 SURROUND ▲		Eject / Surround





Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	OK	9	9

Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	OK	9	9





Original	Replacement		Replacement
Guide -/-- 1.		Guide / EPG / -/--	
0/10		0	
2.Fav P/C 2.		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
Lang		Shift + Audio / Lang I/II	

Original	Replacement

