

















 















 








 















Original	Replacement
	 Power
	 AV / Input / RDS
	 Shift + 1
	 Text / Goto
	 Audio / Lang I/II
	 Subtitle / EQ
	 Picture / Format
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Guide / EPG / -/--
	 Up
	 Info / Angle
	 Left
	 OK
	 Right

Original	Replacement
	 Back / Return
	 Down
	 Menu / Home
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3





Original		Replacement	
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX-HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
CLOCK	Clock	TIMER SLEEP	Sleep / Timer
0 . @	0	HDMI-BAT 0	0
P=P	P=P	PC FAV MARKER	Fav / Marker / PC
AUREA	Aurea Up	LIST SMART	Smart / List
AMBILIGHT	Ambilight	OPT-TOOLS SETUP	Setup / OPT /
Aurea Down	Aurea Down	MEDIA DISPLAY	Display / Media
MODE	Mode	TOP MENU D.MENU	D.Menu / Top

Original		Replacement	

