


 



 

 

 



 

 







 





 



 

 

 



















 








 

 










Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		Recall		Back
	Tv/Radio		TV/R		Info		Info
	Play		Play		Up		Up
	Pause		Pause		Left		Left
	FAV		Pre Ch		Right		Right
	SAT		Media		Down		Down
	TV/AV		AV		Exit		Exit
	1		1		Menu		Menu
	2		2		OK		Ok
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		EPG		Guide
	6		6		CH+		Ch +
	7		7		CH-		Ch -
	8		8		Red/Audio		Red
	9		9		Red/Audio		Dual





Original		Replacement	
 POSITION	Green/Position	 B	Green
	Yellow/[...]	 C	Yellow
	Yellow/[...]	 AD SUBT	Subt
 AUDIO RL	Blue/Audio R/L	 D	Blue
	P+	 SHIFT + CH	Shift + Ch +
	UHF	 HOME SMART	Smart
	PAL/NTSC	 PICTURE FORMAT	Format
	P-	 SHIFT + CH -	Shift + Ch -

Original		Replacement	

