



Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Yellow / YouTube / Repeat
Yellow / Status	Info / Angle
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	Left
Left / I<<	I<< / Preset-
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	Shift + Exit / Cancel / Clear
7	7
8	8





	Original	Replacement		Original	Replacement
	9	9			
	SP / LP	Smart / List			
	AV	AV / Input / RDS			
	0 / --	0			
	<< REW.	<< / Tune-			
	Play	Play / Slow			
	>> F.FWD	>> / Tune+			
	Rec.	Rec / Rec Mode			
	Stop	Stop / Hold			
	Pause	Pause / Step / Freeze			

	Original	Replacement		Original	Replacement











 

 

 







Original	Replacement
 Power	 Power
 Green / Prog.	 Green / APP / Repeat
 Green / Prog.	 TV/Radio /
 Yellow / Status	 Info / Angle
 Yellow / Status	 Yellow / YouTube / Repeat
 Blue / Guide	 Blue / Prime Video / Random
 Blue / Guide	 Guide / EPG / -/--
 Red / Dec.	 Red / Netflix / Search
 Up	 Up
 Purple / Text	 Display / Media
 Purple / Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Left / I<<	 I<< / Preset-
 Left / I<<	 Left
 OK	 OK
 Right / >>I	 Right
 Right / >>I	 >>I / Preset+

Original	Replacement
 Menu	 Menu / Home
 Vol+	 Vol+
 Down	 Down
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 Index / Mark	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 0000	 Shift + Exit / Cancel / Clear
 7	 7
 8	 8





	Original	Replacement	Original	Replacement
	9	 9		
	SP / LP	 Smart / List		
	AV	 AV / Input / RDS		
	0 / --	 0		
	<< REW.	 << / Tune-		
	Play	 Play / Slow		
	>> F.FWD	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Pause	 Pause / Step / Freeze		

