







 

 















Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 R/L	 Blue / Prime Video / Random
 0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Clear	 Exit / Cancel / Clear
 Prog	 TV/Radio /
 Time	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Title	 Sound / Title
 Menu	 Menu / Home
 Default	 AV / Input / RDS
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze





























































 










Original	Replacement
	 I<< / Preset-
	 >> / Tune+
	 Stop / Hold
	 >> / Preset+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Zoom / Size
	 D.Menu / Top
	 Shift + Pause / Step /
	 Shift + Play /
	 Vol+
	 Smart / List
	 Picture / Format
	 Back / Return
	 Vol-

Original	Replacement





Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+























Original	Replacement	Original	Replacement
Volume-	VOL —	Vol-	
Display	MEDIA DISPLAY	Display / Media	
Slow Down	CH PAGE —	CH- / Page-	
1	TV 1	1	
2	DVD 2	2	
3	CD - BTB 3	3	
4	VIDEO 4	4	
5	TAPE 5	5	
6	TUNER 6	6	
7	AUX - HDD 7	7	
8	USB 8	8	
9	BLUETOOTH 9	9	
+10	GUIDE EPG	Guide / EPG / -/--	
0	HDMI - BAT 0	0	
R/L	PC FAV MARKER	Fav / Marker / PC	
Search	NETFLIX SEARCH	Red / Netflix / Search	
Repeat/1/All	APP REPEAT	Green / APP / Repeat	

Original	Replacement	Original	Replacement
Rep/A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat	
Shuffle	Prime Video RANDOM	Blue / Prime Video / Random	
Karaoke/Step	SHIFT + STEP-FREEZE	Shift + Pause / Step /	
Echo+	SHIFT + [Up Arrow]	Shift + Up	
Echo-	SHIFT + [Down Arrow]	Shift + Down	
3D	SHIFT + CD-BTB	Shift + 3	
Video	SHIFT + VIDEO	Shift + 4	
























Original	Replacement	Replacement
On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer

Original	Replacement	Replacement
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+





Original	Replacement	
Volume-	 Vol-	
Display	 Display / Media	
Slow Down	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
+10	 Guide / EPG / -/--	
0	 0	
C/CH	 Fav / Marker / PC	
Np	 Red / Netflix / Search	
Repeat/1/All	 Green / APP / Repeat	

Original	Replacement	
Rep/A-B	 Yellow / YouTube / Repeat	
R/L	 Blue / Prime Video / Random	

