









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Info/Display	 Info / Angle
 I/II/Nicam	 Shift + Audio / Lang I/II
 DVD/USB	 Shift + 2
 Text	 Text / Goto





Original		Replacement	
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Play/Pause/Index		Play / Slow
	Stop/Reveal		Stop / Hold
	Step/Subpage		Pause / Step / Freeze
	Open/Close/Hol		Eject / Surround
	I<</FAV		I<< / Preset-
	>>ITv/Radio		Shift + >> /
	<</Audio		<< / Tune-
	>>/EPG		>> / Tune+
	Red/Prog		Red / Netflix / Search
	Green/Zoom		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Blue/DVD-Setup		Blue / Prime Video / Random
	DVD-Menu		D.Menu / Top
	Repeat		Shift + Green / APP / Repeat
	A-B		Shift + Yellow / YouTube / Repeat

Original	Replacement
	Audio / Lang I/II

