



















 







 











 























 







Original		Replacement		Original		Replacement	
	Power		Power		Source		AV / Input / RDS
	Mute		Mute / Dimmer		Home		Menu / Home
	Play / Pause		Play / Slow		Up		Up
	Play / Pause		Pause / Step / Freeze		Down		Down
	Stop		Stop / Hold		Right		Right
	Rec		Rec / Rec Mode		Left		Left
	<<		<< / Tune-		OK		OK
	>>		>> / Tune+		Del		Exit / Cancel / Clear
	<<		I<< / Preset-		Blue / Info		Info / Angle
	>>		>>I / Preset+		Back		Back / Return
	:Q		Sound / Title		Vol+		Vol+
	TV Play		Eject / Surround		Vol-		Vol-
	Format		Picture / Format		Internet		Smart / List
	Live TV		TV/Radio /		CH+		CH+ / Page+
	≡		D.Menu / Top		CH-		CH- / Page-
	⚙		Setup / OPT /		Mouse		Display / Media
	Green / TTX		Text / Goto		1		1





	Original	Replacement	Original	Replacement
	2	DVD 2		
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	0	HDMI - BAT 0		
	Red / EPG	GUIDE EPG		
	←]	PC FAV MARKER		
	Red / EPG	NETFLIX SEARCH		
	Green / TTX	APP REPEAT		
	Yellow / FAV	YouTube REPEAT A-B		
	Blue / Info	Prime Video RANDOM		
	Yellow / FAV	SHIFT + PC FAV MARKER		

