


 



 






 














 







Original	Replacement	Original	Replacement
 Standby	 Power	 Yellow / Timer	 Shift + AV
 ---	 Media	 Blue / Info	 Blue
 1	 1	 Blue / Info	 Info
 2	 2	 Menu	 Menu
 3	 3	 Exit	 Exit
 4	 4	 Up	 Up
 5	 5	 Left / <<	 Left
 6	 6	 OK	 Ok
 7	 7	 Right / >>	 Right
 8	 8	 Down	 Down
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 Text	 Text	 Pause	 Pause
 Red / SUB-T	 Red	 Guide	 Guide
 Red / SUB-T	 Subt	 Mute	 Mute
 Green / Sort	 Green	 CH+	 Ch +
 Yellow / Timer	 Yellow	 CH-	 Ch -





Original	Replacement	Original	Replacement
 TV / STB	 AV		
 TV / Radio	 TV/R		
 (((••))) A.L/R	 Smart		
 A.Lang	 Dual		
 Sleep	 Sleep		
 Recall	 Back		
 FAV	 Pre Ch		
 P.STD	 Format		
 P.Size	 List		
 Zoom	 Eject		
 M-PIG	 3D		

