



	Original	Replacement
	Display	Display / Media
	Power	Power
	Function-	Shift + Down
	Function+	Shift + Up
	Sound	Sound / Title
	Menu	Menu / Home
	Timer	Sleep / Timer
	Up	Up
	Folder-	CH- / Page-
	OK	OK
	Folder+	CH+ / Page+
	Down	Down
	Return	Back / Return
	Clear	Exit / Cancel / Clear
	I<</Preset-	I<< / Preset-
	Play	Play / Slow
	Pause	Pause / Step / Freeze

	Original	Replacement
	>>I/Preset+	>>I / Preset+
	<</Tuning-	<< / Tune-
	Stop	Stop / Hold
	>>/Tuning+	>> / Tune+
	Vol+	Vol+
	Vol-	Vol-

