 





 



 

 

 


 
 
 
 
 

 

 



 







Original	Replacement	Original	Replacement
 TV	 TV/R	 Tv/AV	 AV
 CD	 Yellow	 Pro Logic	 Media
 DVD	 Blue	 Center-	 Shift + Ch -
 Tuner/Band	 Green	 Center+	 Shift + Ch +
 Tape	 Red	 Test	 Back
 VCR	 Smart	 Surround +	 Ch +
 Vol+	 Vol +	 Surround -	 Ch -
 Vol-	 Vol -	 Power TV	 Power
 Muting	 Mute	 Tv Vol Up	 Shift + Vol +
 Up	 Up	 Tv Vol Down	 Shift + Vol -
 Down	 Down	 1 Tv	 1
 Right	 Right	 2 Tv	 2
 Left	 Left	 3 Tv	 3
 Select	 Ok	 4 Tv	 4
 Menu	 D. Menu	 5 Tv	 5
 Display	 Info	 6 Tv	 6
 Disc/Deck 1/2	 Menu	 7 Tv	 7






Original	Replacement	Original	Replacement
 Power DVD	 Power	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Back
 Tuner/Band	 Green	 Pro Logic	 Media
 Tape	 Red	 Center-	 Shift + Ch -
 CD	 Yellow	 Center+	 Shift + Ch +
 DVD	 Blue	 Surround +	 Ch +
 Play DVD	 Play	 Surround -	 Ch -
 I<</<< DVD	 <<	 1 DVD	 1
 Stop DVD	 Stop	 2 DVD	 2
 >>/>>I DVD	 >>	 3 DVD	 3
 Disc/Deck 1/2	 Menu	 4 DVD	 4
 Display	 Info	 5 DVD	 5
 Menu	 D. Menu	 6 DVD	 6
 Up	 Up	 7 DVD	 7
 Down	 Down	 8 DVD	 8
 Right	 Right	 9 DVD	 9



 






 

 

 



 


 
 
 


 

 

 







 



 

















 
 




 



 


Original	Replacement	Original	Replacement
 Power CD	 Power	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Back
 CD	 Yellow	 Pro Logic	 Media
 DVD	 Blue	 Center-	 Shift + Ch -
 Tape	 Red	 Center+	 Shift + Ch +
 Tuner/Band	 Green	 Surround +	 Ch +
 Stop CD	 Stop	 Surround -	 Ch -
 I<</<< CD	 <<	 Vol+	 Vol +
 >>/>>I CD	 >>	 Vol-	 Vol -
 Play CD	 Play	 Muting	 Mute
 Menu	 D. Menu	 Power Tapes	 Shift + Power
 Display	 Info	 Stop Tapes	 Shift + Stop
 Disc/Deck 1/2	 Menu	 Play Tapes	 Shift + Play
 Up	 Up	 I<</<< Tape	 Shift + <<
 Down	 Down	 >>/>>I Tape	 Shift + >>
 Right	 Right	 Disc/Deck 1/2	 Shift + Menu



Tape



Original	Replacement	Original	Replacement
 Power VCR	 Power	 7 VCR	 7
 VCR	 Smart	 8 VCR	 8
 Tape	 Red	 9 VCR	 9
 TV	 TV/R	 0 VCR	 0
 CD	 Yellow	 >10/-/- VCR	 Guide
 DVD	 Blue	 Direct Tuning/Disc Enter	 Text
 Tuner/Band	 Green	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Select	 Ok
 4 VCR	 4	 Disc/Deck 1/2	 Menu
 5 VCR	 5	 Display	 Info
 6 VCR	 6	 Menu	 D. Menu



