

 

 







 

 

 

 

 

 

 



 









Original	Replacement
 Power	 Power
 1	 1
 2	 2
 Eject / Open-Cl ose	 Eject / Surround
 VCR	 Shift + 4
 DVD	 Shift + 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 AV / I nput	 AV / I nput / RDS
 >>	 >> / Tune+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Preset +
 I <<	 I << / Preset -
 St op	 St op / Hol d
 Pl ay	 Pl ay / Sl ow
 Pause / St ep	 Pause / St ep / Freeze
 Di sc Menu / Li st	 D. Menu / Top
 Home	 Menu / Home
 Di spl ay	 Di spl ay / Medi a
 Ret ur n	 Back / Ret ur n
 Ent er	 OK
 Up	 Up
 Down	 Down
 Ri ght	 Ri ght
 PR/ CH/ TRK+	 CH+ / Page+
 PR/ CH/ TRK-	 CH- / Page-
 Lef t	 Lef t



