













































 









Original	Replacement	Original	Replacement
 POWER	 Power	 NICAM / A2	 Audio / Lang I/II
 MUTE	 Mute / Dimmer	 INPUT	 AV / Input / RDS
 1	 1	 UP	 Up
 2	 2	 DISPLAY	 Display / Media
 3	 3	 LEFT	 Left
 P. MODE	 Picture / Format	 OK	 OK
 4	 4	 RIGHT	 Right
 5	 5	 MENU	 Menu / Home
 6	 6	 DOWN	 Down
 S. MODE	 Sound / Title	 EXIT	 Exit / Cancel / Clear
 7	 7	 RED	 Red / Netflix / Search
 8	 8	 GREEN	 Green / APP / Repeat
 9	 9	 YELLOW	 Yellow / YouTube / Repeat
 SLEEP	 Sleep / Timer	 BLUE	 Blue / Prime Video / Random
 ASPECT	 Shift + Picture / Format	 TEXT	 Text / Goto
 0	 0	 PLAY / PAUSE	 Play / Slow
 BACK	 Back / Return	 PLAY / PAUSE	 Pause / Step / Freeze





Original	Replacement
SIZE	ZOOM Zoom / Size
STOP	HOLD Stop / Hold
HOLD	SHIFT + HOLD Shift + Stop /
REW	TUNE- << / Tune-
FWD	TUNE+ >> / Tune+
INDEX	ANGLE INFO Info / Angle
REVEAL	OPT-TOOLS SETUP Setup / OPT /
SKIP PREV.	PRESET- << / Preset-
SUBPAGE	SURROUND Eject / Surround
SKIP NEXT	PRESET+ >> / Preset+
REPEAT	SHIFT + APP REPEAT Shift + Green / APP /
SUBTITLE	EQ SUBTITLE Subtitle / EQ
AUTO	LIST SMART Smart / List
LANG.	SHIFT + LANG I/II AUDIO Shift + Audio / Lang I/II
FAV	PC FAV MARKER Fav / Marker / PC
T. SHIFT	SHIFT + STEP-FREEZE Shift + Pause / Step /
REC	REC MODE Rec / Rec Mode

Original	Replacement
REC. MENU	TOP MENU D.MENU D.Menu / Top
TV / RADIO	PROGRAM TV/RADIO TV/Radio /
VOL-	VOL- Vol-
VOL+	VOL+ Vol+
CH-	CH PAGE CH- / Page-
CH+	CH PAGE CH+ / Page+

