



Original	Replacement	Original	Replacement
Power	Power	I<<	I<< / Preset-
Control	Setup / OPT /	Stop	Stop / Hold
[i+]	Info / Angle	>>I	>>I / Preset+
P.Info	Smart / List	1	1
ATV	Shift + Smart / List	2	2
DTV	Shift + Display / Media	3	3
SAT	Shift + 0	4	4
Radio	TV/Radio /	5	5
Power Ext. Media	Shift + Power	6	6
←	Shift + Left	7	7
Pause	Pause / Step / Freeze	8	8
→	Shift + Right	9	9
Rec	Rec / Rec Mode	Recall	Fav / Marker / PC
<<	<< / Tune-	0	0
Play	Play / Slow	Source	AV / Input / RDS
>>	>> / Tune+	I/II/I+II/▼/O	Audio / Lang I/II
Rec Stop	Shift + Stop / Hold	[<>]	Picture / Format



