

 

 

 

 

 

 

 

 

 
 
 
 
 
 
 



 





 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/- 10+	 SHIFT +  Shift + Guide
 Recall	 RETURN BACK Back
 P.Mode	 SHIFT +  PICTURE FORMAT Shift + Format
 Nicam	 SHIFT +  SETTINGS OPT Shift + Options
 S.Mode	 SOUND DUAL Dual

Original	Replacement
 Source	 TIMER AV AV
 Info	 DISPLAY INFO Info
 Up	 Up
 Left	 Left
 OK	 OK Ok
 Right	 Right
 Down	 Down
 Menu	 TOP MENU MENU Menu
 Exit	 CLEAR EXIT Exit
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Aspect	 PICTURE FORMAT Format
 Sleep	 PROG SLEEP Sleep
 Freeze	 SHIFT +  Shift + Stop
 CH+	 + CH Ch +
 CH-	 CH - Ch -
 TV	 HOME SMART Smart





Original		Replacement	
	USB		Media
	Shift		3D
	Rec		Rec
	Auto / D.Setup		Options
	FAV / D.Menu		Pre Ch
	FAV / D.Menu		Shift + Menu
	EPG / D.Title		Guide
	Text / Angle		Text
	Subtitle		Subt
	Mix / Eject		Shift + Text
	Mix / Eject		Eject
	Play/Pause / TV/Radio		Play
	Play/Pause / TV/Radio		Pause
	Play/Pause / TV/Radio		TV/R
	Stop / Hold		Stop
	<< / Index		<<
	>> / Size		>>

Original		Replacement	
	I<< / Reveal		I<<
	>>I / Subpage		>>I
	Red / Audio		Shift + Dual
	Red / Audio		Red
	Green / Goto		Green
	Yellow / Repeat		Yellow
	Blue / A-B		Blue

