


 







 

 









 


 




















| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Standby |  Power |  -/-- |  SHIFT + GUIDE Shift + Guide |
|  Mute |  Mute |  Recall |  FAV PRE-CH Pre Ch |
|  Source |  TIMER AV AV |  Menu |  TOP MENU MENU Menu |
|  P.Mode |  SHIFT + PICTURE FORMAT Shift + Format |  Exit |  CLEAR EXIT Exit |
|  S.Mode |  SHIFT + SOUND DUAL Shift + Dual |  Text |  REPEAT TEXT Text |
|  Audio I/II |  SOUND DUAL Dual |  Display |  DISPLAY INFO Info |
|  Sleep |  PROG SLEEP Sleep |  Up |  Up |
|  1 |  1 |  Down |  Down |
|  2 |  2 |  Right |  Right |
|  3 |  3 |  Left |  Left |
|  4 |  4 |  OK |  OK Ok |
|  5 |  5 |  Vol+ |  + VOL Vol + |
|  6 |  6 |  Vol- |  VOL - Vol - |
|  7 |  7 |  CH+ |  + CH Ch + |
|  8 |  8 |  CH- |  CH - Ch - |
|  9 |  9 |  Red |  A Red |
|  0 |  0 |  Green |  B Green |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------|
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Subtitle |  | Subt |
|  | Size |  | Format |
|  | Reveal |  | Back |
|  | Mix |  | Smart |
|  | Index |  | List |
|  | EPG |  | Guide |
|  | Play |  | Play |
|  | Pause/Hold |  | Pause |
|  | Stop/FAV |  | Stop |
|  | I<</Cancel |  | I<< |
|  | >>I/Subpage |  | >>I |
|  | <</FAV- |  | << |
|  | >>/FAV+ |  | >> |
| | | | |
| | | | |

