







 



 



 


 
 

 








 

 

 

 
 




Original	Replacement
	Mute / Dimmer
	Power
	TV/Radio /
	Shift + 2
	Shift + TV/Radio / Program
	Shift + Rec / Rec Mode
	Shift + Yellow / YouTube / REPEAT A-B
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	0
	Guide / EPG / -/-
	Smart / List
	Picture / Format
	Text / Goto
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Vol+
	Up
	CH+ / Page+
	Left
	OK
	Right
	Vol-
	Down
	CH- / Page-






 



 








 

 

 

 

 



 

 



Original	Replacement	Original	Replacement
 Red/C-Set	 Red / Netflix / Search		
 Green/SV	 Green / APP / Repeat		
 Yellow/Zoom	 Yellow / YouTube / Repeat		
 Blue/Marker	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Rec	 Shift + Stop /		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		











 





 
 
 
 



 


Original	Replacement
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Shift + 2
	 Shift + TV/Radio / Program
	 Shift + Rec / Rec Mode
	 Shift + Yellow / YouTube /
	 Audio / Lang I/II
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
	 0
	 Guide / EPG / -/-
	 Smart / List
	 Picture / Format
	 Text / Goto
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 Vol+
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Vol-
	 Down
	 CH- / Page-










 









Original	Replacement	Original	Replacement
 Red/C-Set	 Red / Netflix / Search		
 Green/SV	 Green / APP / Repeat		
 Yellow/Zoom	 Yellow / YouTube / Repeat		
 Blue/Marker	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Shift + Stop /		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 << / Tune-
	 >> / Tune+
	 Audio / Lang I/II
	 Picture / Format
	 TV/Radio /
	 Text / Goto
	 Menu / Home
	 Up
	 Info / Angle
	 Left
	 OK

Original	Replacement
	 Right
	 Exit / Cancel / Clear
	 Down
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9









































































Original	Replacement
EPG/DVD-AV	Guide / EPG / -/--
0/AV	0
Red/C-Set	Red / Netflix / Search
Green/SV	Green / APP / Repeat
Yellow/Zoom	Yellow / YouTube / Repeat
Blue/Marker	Blue / Prime Video / Random
Rec	Shift + Stop /
Rec Menu	Shift + Rec / Rec Mode
Radio	Shift + TV/Radio / Program
DVD	Shift + 2
[-]/←-AB	Shift + Yellow / YouTube /

Original	Replacement





Original	Replacement	Original	Replacement
Power	 Power	Right	 Right
Mute	 Mute / Dimmer	End	 Exit / Cancel / Clear
Play	 Play / Slow	Down	 Down
Pause	 Pause / Step / Freeze	Vol+	 Vol+
Stop	 Stop / Hold	Assist/Card	 Smart / List
Rec	 Rec / Rec Mode	P+	 CH+ / Page+
<<	 << / Tune-	Vol-	 Vol-
>>	 >> / Tune+	P-	 CH- / Page-
Audio	 Audio / Lang I/II	1	 1
PIP	 Picture / Format	2	 2
TV	 TV/Radio /	3	 3
Text/Disc-M	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Up	 Up	6	 6
Info	 Info / Angle	7	 7
Left	 Left	8	 8
OK	 OK	9	 9

Original	Replacement	Original	Replacement
Power	 Power	Right	 Right
Mute	 Mute / Dimmer	End	 Exit / Cancel / Clear
Play	 Play / Slow	Down	 Down
Pause	 Pause / Step / Freeze	Vol+	 Vol+
Stop	 Stop / Hold	Assist/Card	 Smart / List
Rec	 Rec / Rec Mode	P+	 CH+ / Page+
<<	 << / Tune-	Vol-	 Vol-
>>	 >> / Tune+	P-	 CH- / Page-
Audio	 Audio / Lang I/II	1	 1
PIP	 Picture / Format	2	 2
TV	 TV/Radio /	3	 3
Text/Disc-M	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Up	 Up	6	 6
Info	 Info / Angle	7	 7
Left	 Left	8	 8
OK	 OK	9	 9





Original	Replacement
EPG/DVD-AV	Guide / EPG / -/--
0/AV	0
Red/C-Set	Red / Netflix / Search
Green/SV	Green / APP / Repeat
Yellow/Zoom	Yellow / YouTube / Repeat
Blue/Marker	Blue / Prime Video / Random
Rec	Shift + Stop /
Rec Menu	Shift + Rec / Rec Mode
Radio	Shift + TV/Radio / Program
DVD	Shift + 2
- [] / ← AB	Shift + Yellow / YouTube /

Original	Replacement

