



Original	Replacement	Original	Replacement
Power	Power	Direct Tv Rec	TV/R
HDD	Shift + Media	ShowView	3D
DVD	Media	CH+	Ch +
1	1	CH-	Ch -
2	2	Vol+	Vol +
3	3	Vol-	Vol -
4	4	I<< Skip	I<<
5	5	Skip >>I	>>I
6	6	<< Slow/Search	<<
7	7	Slow/Search >>	>>
8	8	Pause	Pause
9	9	Stop	Stop
0	0	Play	Play
-/--	Guide	Menu / Play List	Menu
Cancel	Exit	Top Menu / Direct Navigator	D. Menu
AV	AV	Functions	Options
Input Select	Eject	Return	Back











 














 


 

 

 







Original	Replacement
	Up
	Down
	Right
	Left
	Ok
	Rec
	Shift + Right
	Shift + Left
	Format
	Text
	Smart
	Sleep
	Shift + AV
	Pre Ch
	Subt
	List
	Shift + Rec

Original	Replacement
	Red
	Info
	Green
	Yellow
	Dual
	Blue





Original	Replacement
 Power	 Power
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 A	 Red
 B	 Green
 C	 Yellow

Original	Replacement
 D	 Blue

