
 














 

 

 

 









 

 



Original	Replacement
 Standby	 Power
 Open / Close	 Eject / Surround
 Play Mode	 Picture / Format
 Timer	 Sleep / Timer
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Title	 Sound / Title
 Display	 Display / Media
 Zoom	 Zoom / Size
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Return	 Back / Return
 Watch TV	 Smart / List
 Up	 Up
 Left	 Left
 Select	 OK
 Right	 Right

Original	Replacement
 Down	 Down
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 << Search	 << / Tune-
 Search >>	 >> / Tune+
 Program+	 CH+ / Page+
 Rec. Mode	 SHIFT + Rec / Rec Mode
 TV / DVD	 TV/Radio /
 Program-	 CH- / Page-
 Record	 Rec / Rec Mode
 Insert Chapter	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Video Source	 AV / Input / RDS
 Audio	 Audio / Lang I/II





	Original	Replacement	Original	Replacement
	 Angle	 Info / Angle		
	 Search Mode	 Red / Netflix / Search		
	 1	 1		
	 2	 2		
	 3	 3		
	 Clear	 Exit / Cancel / Clear		
	 4	 4		
	 5	 5		
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 0	 0		

