



Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original	Replacement	Original	Replacement
 9	 9		
 Menu	 Menu / Home		
 Help	 Text / Goto		
 0	 0		













Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/--		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original		Replacement		Original		Replacement	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				







Original	Replacement	Original	Replacement
	Power		Power
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Subtitle		Subtitle / EQ
	ALT		Smart / List
	ARC		Display / Media
	TV Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	Language		Audio / Lang I/II
	PG		Sound / Title
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	P+		CH+ / Page+
	V+		Vol+
	P-		CH- / Page-
	V-		Vol-
	Red		Red / Netflix / Search
	White		Fav / Marker / PC
	Green		Green / APP / Repeat
	Blue		Blue / Prime Video / Random
	Yellow		Yellow / YouTube / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original		Replacement		Original		Replacement	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				













Original		Replacement		Original		Replacement	
	Power		Power		P+		CH+ / Page+
	TV		TV/Radio /		V+		Vol+
	Radio		Shift + TV/Radio / Program		P-		CH- / Page-
	Subtitle		Subtitle / EQ		V-		Vol-
	ALT		Smart / List		Red		Red / Netflix / Search
	ARC		Display / Media		White		Fav / Marker / PC
	TV Guide		Guide / EPG / -/-		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Blue		Blue / Prime Video / Random
	Language		Audio / Lang / I/II		Yellow		Yellow / YouTube / Repeat
	PG		Sound / Title		1		1
	Info		Info / Angle		2		2
	Exit		Exit / Cancel / Clear		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		OK		6		6
	Right		Right		7		7
	Down		Down		8		8





Original		Replacement		Original		Replacement	
	9		9				
	Menu		Menu / Home				
	Help		Text / Goto				
	0		0				

